


Rear Derailleur

RD-M9260 / M8260 / M6260

Status LED

Function button

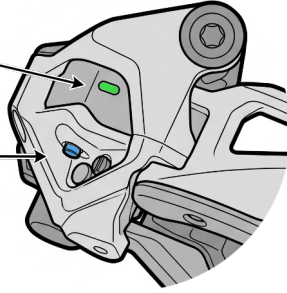

Shift Switch


SW-M9250 / M8250 / M6250

Status LED

Switch Y

Switch A

Switch X

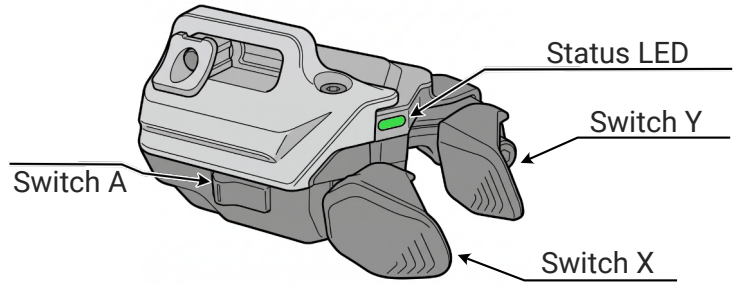

Auto Shift (Shimano e-bike)

Double-click the **function button** to change the **Auto Shift** mode, or **single-click** **Switch A**.



The LED shows the selected mode.

bettershifting.com/autoshift

Auto 1



Flashing green (1 time)

Auto 2



Flashing green (2 times)


Manual



Solid green

Shifter Battery Check

Press **X** and **Y** together for **0.5s**. The shifter LED will indicate the battery level.

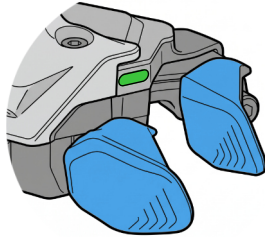

100% - 11% Solid green

10% - 1% Solid red

0% Off




bettershifting.com/battery


Derailleur adjustment mode

Press the **derailleur button** for **2 - 4 seconds** to enter derailleur adjustment mode.


The LED is **yellow** in adjustment mode. **Stop the wheels first.**

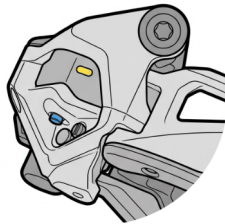

OR

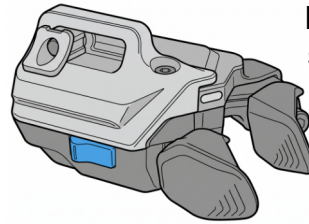

Press **Switch A** for **2-5 seconds** to enter rear derailleur adjustment mode.

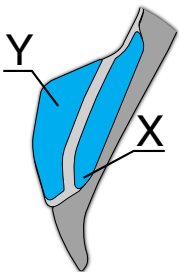


The **Y-button** moves the derailleur **away** from the frame.

The **X-button** moves the derailleur **towards** the frame.



bettershifting.com/adjustment


When done, press the **derailleur button** for **0.5s** or **Switch A** for **2s** to exit adjustment mode.

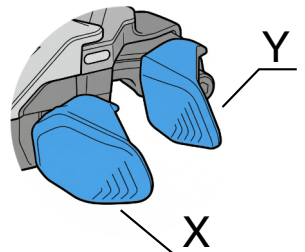

Bluetooth Connection Mode

Press the **function button** for **0.5 - 1.9 seconds** to trigger **Bluetooth Connection Mode**. The LED will **flash blue**.

Disconnect from the phone when done: the derailleur **does not shift** while connected.

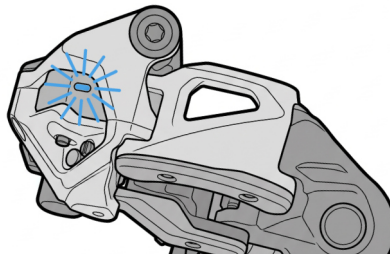

bettershifting.com/bluetooth